

CLAIR LIGHTING FC-1500 FOG MACHINE

User's Manual



Points to note

- *Make sure the power supply has the correct voltage rating before use.
- *Do not add flammable liquids such as gasoline, kerosene, or gas to oil drums.
- *Do not let the machine work when the cooking oil is used up, as this will cause some internal parts to heat up and damage the electronic component.
- *There is a little noise when the machine is working, which is a normal phenomenon.
- *Smoke machine is not waterproof, if moisture, water, or smoke into the machine, should immediately cut off the power and contact your dealer.

Operation Instructions

1. Lay the fog machine flat and open the oil drum cover.
2. Pour high quality smoke into the bucket and tighten the lid. Please note that low-quality smoke agent will damage the fog machine, affect the best effect of the smoke machine.
3. Insert the power cord into the power outlet ON the rear panel of the smoke machine and press the red switch (POWERON/OFF) to the ON position. The digital tube shows heating (UP flashing) , heating (—) , DMX connection (A001 flashing) .
4. The remote control function is controlled by 4 keys, and the functions are as follows: Fog Key is colorless smoke-spraying key, hold down smoke-spraying key, let go to stop smoke-spraying, digital tube shows the size of smoke-spraying volume; R key is red smoke-spraying key; G key is green smoke-spraying key; B key for the blue smoke button. Note: when connecting DMX512 signal, A001 address code jitter, remote control no effect, DMX priority.
5. Digital button functions: a menu button, B Plus Key (A: in the state of smoke to light the smoke button; B: in the state of smoke to lock 3 seconds to lock the smoke button, exit and press again) , c minus key (in the state of waiting for a fixed amount of smoke, and then press exit) , D save or confirm key (from left to right) .

Usage diagram



Home Screen:

SN	Content	Numerical	Function and description
1	A001	d001- 512	DMX512 Address code setting
2	LED	R	Red
		G	Green
		B	Blue
		CC	Jump mode
		CP	Gradient mode
		CF	Colorful Strobe
		FF	White strobe
3	P	01-100	Smoke volume setting
4	d	000-200	Fixed time and fixed amount of smoke injection
5	I	000-999	Timing and quantifying interval time setting, unit (s)

DMX channel function description

CH	Function	Description
CH1	Smoke	Adjust the amount of smoke
CH2	Red Dimming	Red brightness adjustment
CH3	Green dimming	Green brightness adjustment
CH4	Blue Dimming	Blue brightness adjustment
CH5	Strobe	LED Strobe speed adjustment
CH6	LED Effect	0-50 Close 51-100 JUMP 101-200 Gradient 201-255 Colorful Strobe
CH7	Speed control	Adjust LED change speed with channel 6