

Clair Lighting

LED 150W Beam Movinghead



User's Manual

- 1、 Operating voltage: AC220V/50Hz
- 2、 Product power: 150W
- 3、 Lamp bead parameter: 120 W white light
- 4、 Control mode: International general DMX512, 12 channel
- 5、 working model: DMX512, master/slave machine, self-walking, sound-controlled
- 6、 Dimming mode: 0~100% ultra-smooth dimming
- 7、 Stroboscopic: 25 times per second

menu instruction manual

Serial number main menu	explain
Addr	A001---A512 address code
Chlad	12CH Channel selection
SLad	Operation mode selection (DMX self-walking, sound controlled)
Pan	YES, NO electrical machinery X Forward and reverse setting
Tilt	YES, NO electrical machinery Y Forward and reverse setting
Shine	Voice control sensitivity adjustment (0-100)
LED	ON, OFF On-screen setting
DISP	YES, NO show forward and reverse setting
TEMP	XXX Display temperature
Ver	V100 Software version number
Fact	YES, NO Restore factory settings

Fine-tuning menu Press the menu key 5s, Bring up the fine-tuning menu

Pan 0-127 -1-127 Positive and negative fine tuning

Tilt 0-127 -1-127 Positive and negative fine tuning

Color 0-127 -1-127 Positive and negative fine tuning

Gobe 0-127 -1-127 Positive and negative fine tuning

12 channel	function	DMX numerical value	describe
1	X axis	0-255	
2	X axis fine adjustment	0-255	
3	Y axis	0-255	
4	Y axis fine adjustment	0-255	
5	X Y axis speed	0-255	From fast to slow
6	White light pattern	0-255	Pattern dimming from dark to light
7	Pattern stroboscopic	0	No function
		1-255	Synchronous stroboscopic speed from slow to fast (1HZ-25HZ)
		0-12	white light
		13-25	color 1
		26-38	color 2

8	color disk	39--51	color 3
		52--64	color 4
		65--77	color 5
		78--90	color 6
		91--103	color 7
		104--116	color 8
		117--127	color 9
		128-191	Clockwise automatic color switching from fast to slow
9	Pattern plate	192-255	Color automatically switches counterclockwise from slow to fast
		0-15	white light
		16--23	pattern 1
		24-31	pattern 2
		32-39	pattern 3
		40-47	pattern 4
		48-55	pattern 5
		56-63	pattern 6
		64-71	pattern 7
		72-79	pattern 8
		80-87	pattern 9
		88-95	pattern 10
		96-103	pattern 11
		104-111	pattern 12
		112-119	pattern 13
		120-127	pattern 14
10	prism	128-191	Clockwise automatic color switching from fast to slow
		192-255	Color automatically switches counterclockwise from slow to fast
		0-7	Close the prism
11	Macro function	8-127	Open the prism
		128-255	The prism rotates from slow to fast
		0-19	Channel 1 to channel 10 are valid
12	reset	50-200	Self-walking
		201-255	Lamp body sound control
12	reset	0-240	No function
		241-255	The lamp body is reset, and 5s is effective.

In dmx mode, no dmx signal, the first digital tube will blink. After the screen saver, the middle bit of the last digital tube will flash