

Clair Lighting LED Galaxy Ball

User's Manual



Menu Function:

ADDR	A001---A512, Address Code
CHND	9CH, 19CH, Channel select
SLND	MAST, SLAV
SHND	SOUD, AUTO(Speed SP0—SP9) Sound control, Master select
SOUD	ON, OFF ,Sound control switch
SENS	Sound control sensitivity (0 off, 100 best sensitivity)
BLND	YES, NO ,Standby mode
LED	ON, OFF ,Backlight switch
DISP	YES, NO ,Reverse display
PAN	YES, NO ,Pan motor Reverse
TILT	YES, NO ,Tilt motor Reverse
MANU	PAN,TILT RED1,GREEN1,BLUE1,WHITE1, RED2,GREEN2,BLUE2,WHITE2, DIMMER, STROBE, Manual testing
TEST	Auto testing
HOUR	0----9999 ,Machine use time
VER	V104 ,Software version
RSET	YES, NO ,Restore factory settings

DMX Channel function

9CH:

1. Pan motor : 0—127 , 360 degree stroke location
128—191 Clockwise rotation from fast to slow
192---255 Counterclockwise rotation from slow to fast
2. Tilt motor: 0—127, 360 degree stroke location
128—191, Clockwise rotation from fast to slow
192---255 Counterclockwise rotation from slow to fast
3. Dimmer: 0—255 0-----100%
4. Strobe: 0---15 on , 16---131strobe from slow to fast, 132—139 on ,
140—181 quick off ,slow on, 182—189 on , 190—231 slow
off,quick on , 232—239 on , 240---247 random strobe,
248—255 on
5. Red dimmer: 0---255 0-----100%
6. Green dimmer: 0---255 0-----100%
7. Blue dimmer: 0---255 0-----100%
8. White dimmer: 0---255 0-----100%
9. Macro function: 0---69 No function, 70---79 Pan or Tilt motor move off
light valid, 80—89, X or Y axis move off light invalid,
90—199 No function, 200—209 Reset, 210---249 No
function, 250—255 Sound control (5 seconds after force)

19CH:

1. Pan motor: 0—127, 360 degree stroke location
2. Pan motor: 0—9, No function

- 10—127 Clockwise rotation from fast to slow
 128---255 Counterclockwise rotation from slow to fast
3. Pan motor fine dimmer: 0---255(CH4 value 0---9 valid)
4. Tilt motor: 0—127, 360 degree stroke location
5. Tilt motor: 0—9, No function
 10—127, Clockwise rotation from fast to slow
 128---255 Counterclockwise rotation from slow to fast
6. Tilt motor fine dimmer: 0---255(CH7 value 0---9 valid)
7. Dimmer: 0—255 0-----100%
8. Strobe: 0---15 on, 16---131 strobe from slow to fast, 132—139 on,
 140—181 quick off ,slow on, 182—189 on, 190—231 slow
 off,quick on , 232—239 on , 240---247 random strobe ,
 248—255 on
9. Red 1 dimmer: 0---255 0-----100%
10. Green 1 dimmer: 0---255 0-----100%
11. Blue 1 dimmer: 0---255 0-----100%
12. White 1 dimmer: 0---255 0-----100%
13. Red 2 dimmer: 0---255 0-----100%
14. Green 2 dimmer: 0---255 0-----100%
15. Blue 2 dimmer: 0---255 0-----100%
16. White 2 dimmer: 0---255 0-----100%
17. Color auto run: 0---7 No function; 8---127 Fixed 15 colors
 128---191 color jump change; 192---255 color gradual
 change
18. Color auto run speed: 0---255 From slow to fast
19. Macro function: 0---69 No function, 70---79 Pan or Tilt motor move
 off light valid, 80—89, X or Y axis move off light invalid,
 90—199 No function , 200—209 reset , 210---249 No
 function, 250—255 Sound control (5 seconds after force)